

Quadruple firmware v3.21 for HX Stomp

Modes navigation						
Mode order:	Preset	Snapshot	FS	CC		
A+B hold	Previous mode					
C+D hold	Next mode					
C hold	Looper mode enter/exit					
A+C hold	Setup mode			A+D hold (on boot)	Factory reset	

Setup mode	A	B	C	D	A+B	C+D
Page 1	THRU on/off	MIDI config channel on/off	Preset tap toggle (layout 1) on/off	FS lights toggle		Next page
Page 2 Preset mode layout	Layout 1	Layout 2	Layout 3		Previous page	Next page
Page 3 Snapshot mode layout	Layout 1	Layout 2	Layout 3	Layout 4	Previous page	Next page
Page 4 FS mode layout	Layout 1	Layout 2	Layout 3	Layout 4	Previous page	Next page
Page 5 CC mode layout	Layout 1	Layout 2	Layout 3	Layout 4	Previous page	Next page
Page 6 MIDI Channel	Channel -1			Channel +1	Previous page	Next page

Preset mode	A	B	C	D	A+B	C+D
Layout 1	1 (TAP)	2 (TAP)	3 (TAP)	4 (TAP)	Bank down	Bank up
Layout 2	1	2	3	TAP (tuner on hold)	Bank down	Bank up
Layout 3	TAP (tuner on hold)	1	2	3	Bank down	Bank up

Snapshot mode	A	B	C	D	A+B	C+D
Layout 1	Snapshot 1	Snapshot 2	Snapshot 3	TAP (tuner on hold)	Preset down	Preset up
Layout 2	TAP (tuner on hold)	Snapshot 1	Snapshot 2	Snapshot 3	Preset down	Preset up
Layout 3	Snapshot 1	Snapshot 2	Snapshot 3	CC (#6) toggle	Preset down	Preset up
Layout 4	Snapshot 1	Snapshot 2	Snapshot 3	Snapshot 4	Preset down	Preset up

FS mode	A	B	C	D	A+B	C+D
Layout 1	FS4	FS5	CC (#6) toggle	TAP (tuner on hold)	Preset down	Preset up
Layout 2	TAP (tuner on hold)	CC (#6) toggle	FS4	FS5	Preset down	Preset up
Layout 3	CC (#6) toggle	FS4	FS5	TAP (tuner on hold)	Preset down	Preset up
Layout 4	TAP (tuner on hold)	FS4	FS5	One button looper		

CC mode	A	B	C	D	A+B	C+D
Layout 1	CC toggle #6	CC toggle #7	CC toggle #8	TAP (tuner on hold)	Preset down	Preset up
Layout 2	TAP (tuner on hold)	CC toggle #6	CC toggle #7	CC toggle #8	Preset down	Preset up
Layout 3	CC toggle #6	CC toggle #7	CC toggle #8	CC toggle #9	Preset down	Preset up

Looper mode	A	B	C	D
	REC/OVERDUB	TAP (tuner on hold)	UNDO	PLAY/STOP