

Quick guide

Mode navigation and global functions				
Mode order (mode indicator color)	Preset mode (white)	Snapshot mode (green)	FS mode (purple)	CC mode (orange)
A+B hold	Previous mode		C hold	Tuner
B+C hold	Next mode			
B hold	Looper Mode (blue)		A+C hold	Setup mode (blink white)

Preset mode (white)	Button A	Button B	Button C
*preset number depends on selected bank ** if TAP enabled (A+C)	Recall preset #1* (or TAP**)	Recall preset #2* (or TAP**)	Recall preset #3* (or TAP**)
A+B	Previous bank (hold any button to cancel)		
B+C	Next bank (hold any button to cancel)		
A+C	Enable/disable TAP on any button		

Snapshot mode (green)	Button A	Button B	Button C
* if TAP enabled (A+C)	Recall snapshot 1 (or TAP*)	Recall snapshot 2 (or TAP*)	Recall snapshot 3 (or TAP*)
A+B	Preset scroll down		
B+C	Preset scroll up		
A+C	Enable/disable TAP on any button		

FS mode (purple)	Button A	Button B	Button C
	FS4	FS5	TAP
A+B	Preset scroll down		
B+C	Preset scroll up		
A+C	Enable/disable TAP blink		

CC mode (orange)	Button A	Button B	Button C
	CC #4 toggle	CC #5 toggle	CC #6 toggle
A+B	Preset scroll down		
B+C	Preset scroll up		

Looper Mode (blue)	Button A	Button B	Button C
	Record / Overdub	Undo	Play / Stop

Setup mode (blink white)	Button A	Button B	Button C
Page 1	THRU toggle	Exit tuner any button	Two buttons combo toggle
Page 2	MIDI channel -1	-	MIDI channel +1